


NOTES:

IN UNPAVED AREAS A CONCRETE WORK PAD SHALL  
BE PLACED IN FRONT OF THE CABINET DOOR.

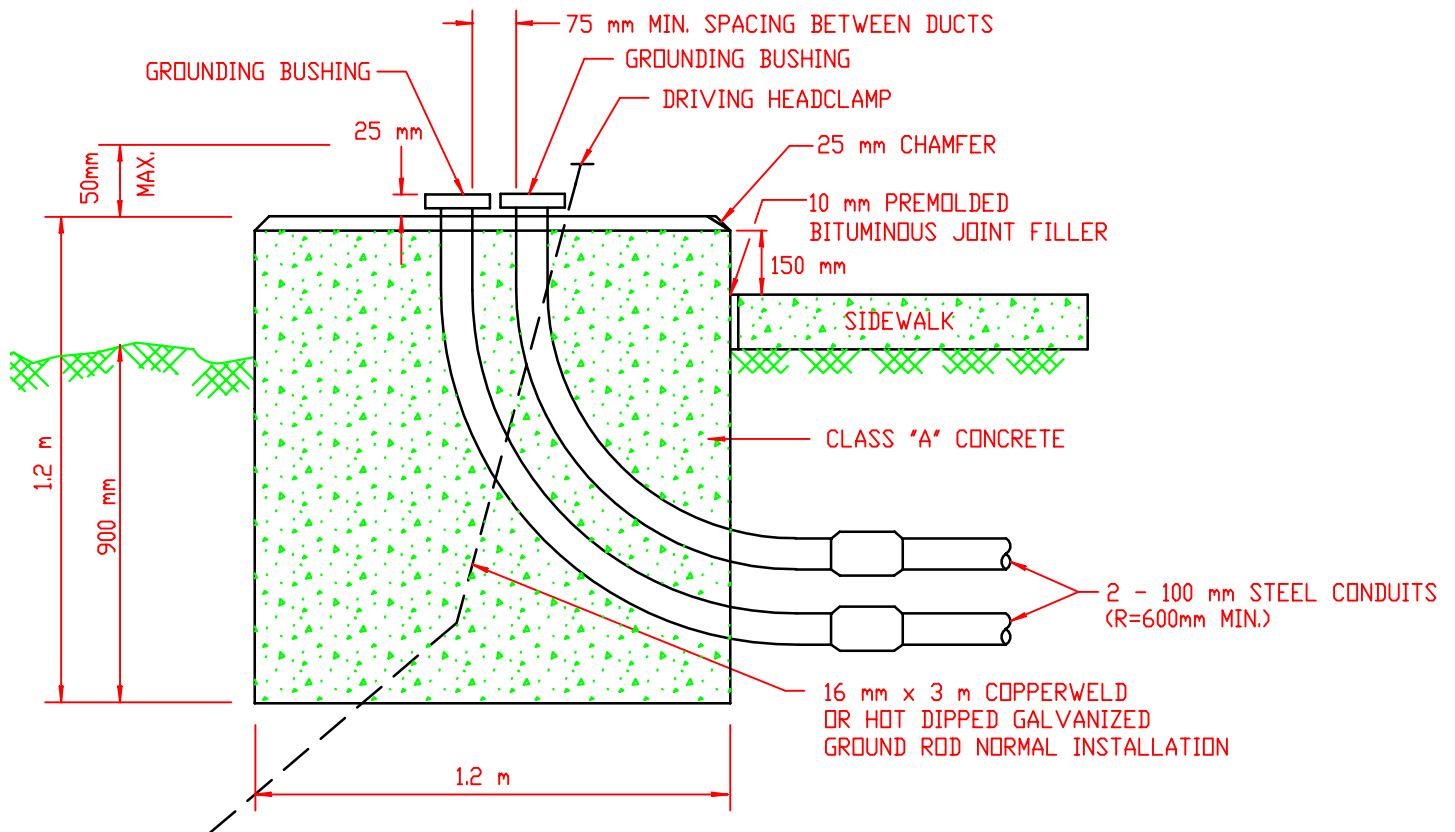

SIDE

CONCRETE BASE FOR CONTROLLER

NOT TO SCALE

4/1/98

REVISED